



LIST OF PARTS CZ 200T

1 Muzzle Extension	28 Washer 4 or 8 or 10	54 Cocking Arm Spring	88 -
2 M4x5 Screw	29 Roller Bush	55 Ø1.6x8 Spring Pin	89 Latching Nut
3 Barrel	30 Pressure Gauge	56 Fastening Screw	91 M4x10 Screw
4 Sight Base	31 Ø21x2 O-Ring, Cylinder Tube	57 Ø4x8 Seal Ring	92 M4x10 Screw
5 M5x6 Screw	32 Cylinder Tube	58 Latch Washer	94 Ø5.3 Washer
6 Pellet Channel Screw	33 Pott	59 Trigger Screw	95 M4 Nut
7 Pellet Channel	34 Valve Cap	60 Trigger Lever Spring	96 M5x5 Screw
8 M3x12 Screw	35 Valve Spring	61 Adjustment Screw, Rear	<u>CZ 200 S Different Parts</u>
9 -	36 Firing Valve Seal	62 Trigger Guard	81 Solid Butt-Stock or full-stock
10 Ball Catch Screw	37 Firing Valve Gate	63 Trigger Lever	82 Ventilated Rubber Butt-Pad
11 Ball Catch Spring	38 End Plug, Firing Valve	64 Distance Washer	83 Single Fore-end Stock
12 Steel Ball	39 Ø6.5x2 O-Ring, Plug	65 Pin	90 M4x16 Screw
13 Receiver Body	40 Striking Pin	66 Trigger Base	93 Muzzle Extension
14 O-Ring, Loading Bolt	41 Striking Pin Spring	67 M3x6 Screw	<u>AA S 200 Different Parts</u>
15 Loading Bolt	42 Ø1.9 Retaining Ring	68 Trigger Base Spring	81 Solid Butt-Stock or full-stock
16 M4x4 Screw	43 Supporting Bracket	69 Locking Washer	82 Ventilated Rubber Butt-Pad
17 Roller Bush	44 Fore-end Stock	70 Adjustment Screw, Front	83 Single Fore-end Stock
18 Screw, Loading Bolt	45 Fore-end Rail	71 Trigger	84 Filling Connector
19 Nut	46 3.9x9.5 Wood Screw	72 Stock Side Screw	85 Filling Connector End Plug
20 Bolt Handle	47 Washer	73 Ø5 Washer	86 Connector Cover
21 -	48 Fore-end Stock Screw	74 Butt-Stock	87 Washer
22 Adjustment Screw	49 Cocking Arm Guide	75 Ø6 Washer	93 Muzzle Extension
23 Main Spring	50 Cocking Arm Guide Screw	76 Connecting Screw	
24 Main Spring Guide	51 Cocking Arm	77 M5x45 Screw	
25 Striker	52 Pivot, Cocking Arm	78 Cylindrical Nut	
26 Roller Bush	53 Nut Socket	79 Cheek-piece	
27 -		80 Adjustable Butt Pad	