



LIST OF PARTS

1 Barrel	26 Trigger	51 Sling Swivel
2 Front Sight	27 Trigger Rivet	52 Sling Swivel Screw
3 Front Sight Screw	28 Trigger Pin	53 Elastic Spacer
4 Front Sight Cover	29 Trigger Rod Pin	54 Trigger Guard
5 Front Sight Base	30 Trigger Rod	55 Trigger Guard Plate
6 Front Sight Base Screw	31 Trigger Rod Nut	56 -
7 -	32 Trigger Spring Washer	57 Rear Stock Screw
8 Rear Sight	33 Trigger Pull Spring	58 Magazine Shell
9 Rear Sight Screw (2x)	34 Bolt Guide	59 Magazine Follower
10 -	35 Bolt	60 Magazine Follower Spring
11 -	36 Extractor	61 Magazine Base
12 Magazine Housing Insert	37 Holder	62 Magazine Plunger
13 Magazine Housing Insert Pin	38 Extractor Spring	63 Magazine Plunger Spring
14 -	39 Safety	64 Magazine Shell
15 Receiver	40 Bolt Handle	65 Magazine Follower
16 Magazine Housing	41 Striker	66 Magazine Follower Spring
17 Magazine Housing Front Screw	42 Striker Spring	67 Adapter Body
18 Magazine Housing Rear Screw	43 Striker Spring Support	68 Magazine Shell
19 Magazine Catch	44 Stock	69 Magazine Follower
20 Magazine Catch Spring	45 Butt Plate	70 Magazine Follower Spring
21 Magazine Catch Pin	46 Butt Plate Screw (2x)	71 Magazine Base
22 Sear	47 Front Stock Screw	72 Magazine Shell
23 Sear Steel Ball	48 Barrel Screw (2x)	73 Magazine Follower Spring
24 Sear Spring	49 Sling Swivel Assembly (2x)	74 Magazine Follower
25 Sear Pin	50 Sling Swivel Wood Screw	