



LIST OF PARTS

1	Frame	30	Safety Detent Plunger
2	Slide Stop	31	Safety Detent Plunger Spring
3	Slide Stop Spring	32	Magazine Catch
4	Slide Stop Spring Pin	33	Magazine Catch Spring
5	Trigger	34	Trigger Bar Spring
6	Trigger Pin	35	Magazine Catch Spring Screw
7	Trigger Bar	36	Magazine Body
8	Trigger Spring	37	Magazine Insert
9	Pin (3x)	38	Magazine Base
10	Ejector	39	Magazine Base Lock
11	Sear	40	Magazine Spring
12	Sear Spring	41	Follower
13	Sear Pin	42	Slide Housing
14	Firing Pin Block Lever	43	Front Sight
15	Firing Pin Block Lever Spring	44	Front Sight Pin
16	Hammer	45	Adjustable Rear Sight
17	Disconnecter	46	Barrel
18	Hammer Pin	47	Adapter Ejector
19	Hammer Pin Retaining Peg	48	Pin
20	Main Spring Strut	49	Barrel Pin
21	Main Spring	50	Slide
22	Main Spring Plug	51	Extractor
23	Main Spring Plug Pin	52	Extractor Spring
24	Magazine Guide	53	Extractor Pin
25	Magazine Guide Pin	54	Firing Pin
26	Grip Panel - Left	55	Firing Pin Spring
27	Grip Panel - Right	56	Firing Pin Stop
28	Grip Panel Screw (2x)	57	Recoil Spring
29	Safety	58	Recoil Spring Guide