



LIST OF PARTS

1	Frame *	37	Magazine Base
2	-	38	Magazine Base Lock
3	Slide Stop Spring	39	Magazine Spring
4	Slide Stop Spring Pin	40	Follower
5	Trigger	41	Recoil Spring *
6	Trigger Pin	42	-
7	Trigger Bar	43	Barrel *
8	Trigger Spring	44	Slide *
9	Pin (3x)	45	Front Sight
10	Ejector	46	-
11	Sear	47	-
12	Sear Spring	48	-
13	Sear Pin	49	-
14	Firing Pin Block Lever	50	Extractor *
15	Firing Pin Block Lever Spring	51	Extractor Pin *
16	Hammer	52	Extractor Spring *
17	Disconnecter	53	Rear Sight
18	Hammer Pin *	54	Firing Pin
19	Hammer Pin Retaining Peg *	55	Firing Pin Spring
20	Main Spring Strut	56	-
21	Main Spring	57	Firing Pin Roll Pin
22	Main Spring Plug	58	Firing Pin Block Stop
23	Main Spring Plug Pin	59	Firing Pin Block Stop Spring
24	Trigger Bar Pin Spring *	60	-
25	Trigger Bar Lifter *	61	-
26	Grip Panel - Left *	62	-
27	Grip Panel - Right *	63	-
28	Grip Panel Screw (4x) *	64	Safety - Right *
29	Safety - Left	65	Safety Detent Plunger - Right *
30	Safety Detent Plunger - Left	66	-
31	Safety Detent Plunger Spring	67	Grip Panel Screw Sleeve (4x) *
32	Magazine Catch *	68	Rear Sight Locking Screw
33	Magazine Catch Spring *	69	Slide Stop
34	Trigger Bar Spring *	70	Insert - Front *
35	Trigger Bar Lifter Washer *	71	Insert - Rear *
36	Magazine Body	72	Trigger Bar Lifter *

The numbers marked with dash (-) are stated here for the purpose of conformity with the lists of other pistol parts only.

The parts marked * differ according to versions, or as case may be in some versions are entirely missing.