



LIST OF PARTS

1	Frame *	37	Magazine Base *
2	Slide Stop *	38	Magazine Base Lock
3	Slide Stop Spring	39	Magazine Spring *
4	Slide Stop Spring Pin	40	Follower *
5	Trigger	41	Recoil Spring *
6	Trigger Pin	42	Recoil Spring Guide *
7	Trigger Bar	43	Barrel *
8	Trigger Spring	44	Slide *
9	Pin	45	Front Sight
10	Ejector	46	Front Sight Pin
11	Sear	47	Loaded Chamber Indicator *
12	Sear Spring	48	Loaded Chamber Indicator Spring *
13	Sear Pin	49	Loaded Chamber Indicator Nut *
14	Firing Pin Block Lever	50	Extractor *
15	Spring (3x)	51	Extractor Pin
16	Hammer *	52	Extractor Spring
17	Disconnecter	53	Rear Sight *
18	Hammer Pin	54	Firing Pin
19	-	55	Firing Pin Spring
20	Main Spring Strut	56	Securing Screw *
21	Main Spring	57	Firing Pin Roll Pin
22	Main Spring Plug	58	Firing Pin Block Stop
23	Main Spring Plug Pin	59	Firing Pin Block Stop Spring
24	Magazine Guide	60	Trigger Bar Disconnecter
25	Magazine Guide Pin	61	Magazine Catch Plug
26	Grip Panel - Left *	62	Magazine Catch Pin
27	Grip Panel - Right *	63	Hammer Decocking Lever Controller - Left *
28	Grip Panel Screw (2x)	64	Hammer Decocking Lever Spring *
29	Safety - Left *	65	Hammer Decocking Lever Spring Pin *
30	Safety Detent Plunger *	66	Hammer Decocking Lever Controller - Right *
31	Safety - Right *	67	Insert *
32	Magazine Catch	68	Insert Pin *
33	-		
34	Trigger Bar Spring		
35	-		
36	Magazine Body *		

Comments:

The parts marked * differ according to versions, or as case may be in some versions are entirely missing.